



Can-Am Defender HD11
Plow Mount
MA11744

INSTALLATION INSTRUCTIONS


Thank you for purchasing a DENALI Plow Mount.
You now own a premium, custom mount to allow you to use your plow with your vehicle.
Please note the following instructions and heed all warnings.

- 
- Your vehicle and plow system can cause death or injury. Please use caution and common sense when operating your unit.
 - Read your Plow Operator Manual, your Front Loading Operator Manual, and all warning labels before operating your vehicle.
 - Operate your vehicle at a walking speed with the blade installed. Do not exceed 5mph (8km/h) even with the blade up.
 - Do not operate the vehicle on slopes greater than 10 degrees with the plow installed.
 - Always lower the plow to the down position before leaving your vehicle unattended.
- SEVERE INJURY OR DEATH MAY RESULT IF YOU ARE NEGLIGENT.**

PARTS LIST

 Please verify that all hardware and parts are included in your package.

Part#	Qty	Item Description
1	1	MA11744 Plow Mount
2	1	Center Bracket
3	4	Side Brackets
4	2	M8-1.25 Flange Bolt
5	4	3/8x16x1.5 Hex Bolt
6	8	3/8 Washer
7	4	3/8-16 Nylock Nut
8	2	M8-12.25 Flange Nut

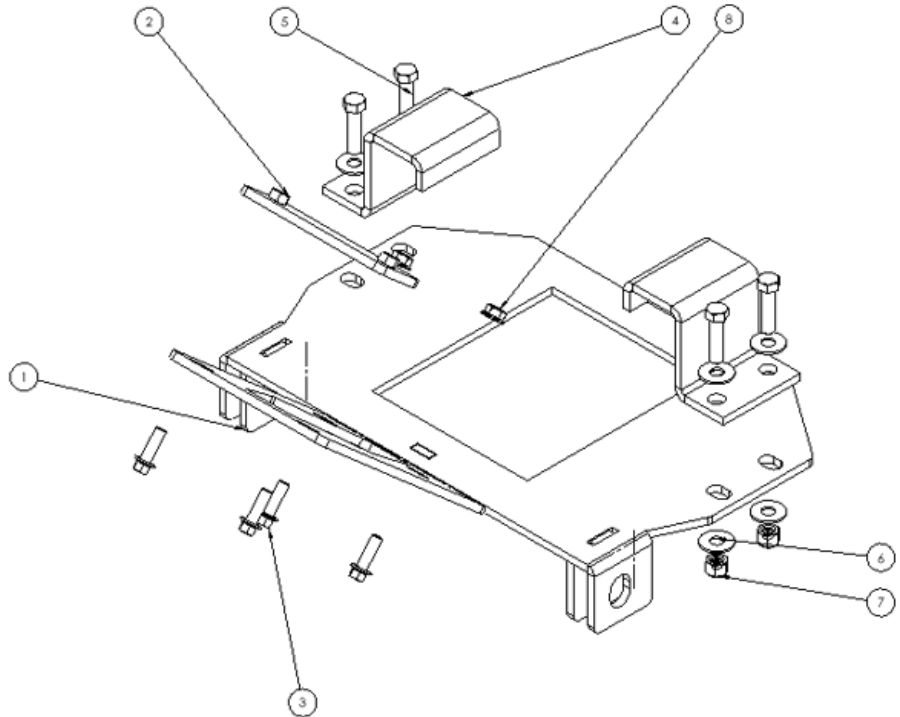

INSTALLATION INSTRUCTIONS

1. Place the side brackets on the frame between the A-Arms. FIGURE 1
2. Loosely secure the plow mount to the side brackets using the 3/8th hardware.
3. Place the center bracket behind the front bumper. FIGURE 2



FIGURE 1



FIGURE 2

4. Loosely secure the mount to the center bracket using the M8 bolts. FIGURE 3
5. Loosely secure the lower M8 bolts to the front using the serrated flange nuts.
6. Secure the mount to the center bracket using the remaining M8 bolts.
7. Tighten all hardware.



FIGURE 3